 

## DF57 Series Mating / Unmating Operation Instruction (For DF57 series)


## Mating


①By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direftion.



©Press down at the lever side with stabilizing the cable side to insert. Mating completes.

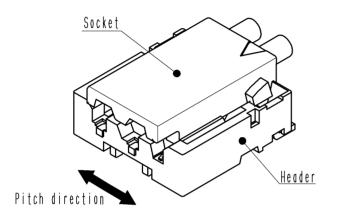


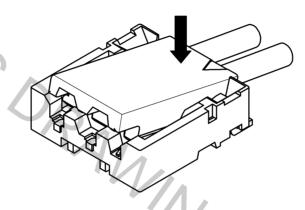

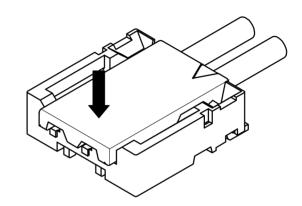


## Unmating


⊕Hook the lever with finger nail.

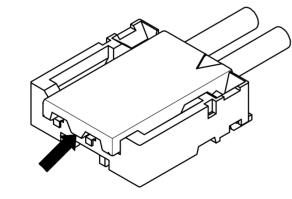

②Lift up to the upper difrection and friction lock is released.

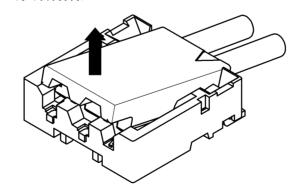

©Lift up to the upper direction and positive lock is released. Removal completes.

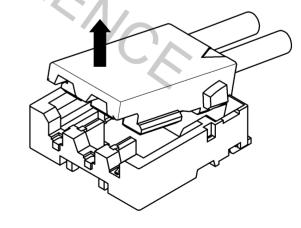

ĸ	DRAWING NO.	EDC3-332438-01	
	PART NO.	DF57H-3S-1.2C	
	CODE NO.	CL666-0012-0-00	$\frac{2}{2}$

M HC0011-5-8\_AN 1 2 3 4 5